



.MOV



- IPS LCD screen
- 2GB memory
- Required resolution for videos and photos **1024x600**
- Lithium-ion battery (3.8V 3500mAh) included, up to 5 hours battery life
- Recharging time from 2 to 10 hours, depending on the power supply
- Mini USB cable for charging and file transfer included.



- IPS LCD screen
- 4GB memory
- Required resolution for videos and photos **1280x800**
- Lithium-ion battery (3.8V 3500mAh) included, up to 5 hours battery life
- Recharging time from 2 to 10 hours, depending on the power supply
- Mini USB cable for charging and file transfer included.

VERY IMPORTANT: DO NOT FORMAT THE DRIVE

HOW TO UPLOAD VIDEO, PHOTOS AND MUSIC

- Connect the .MOV module to a computer (Mac or PC) by using the USB cable supplied.
- Once you plug the USB cable into your computer, a flash drive icon will appear on the desktop (MAC) or a dialog box may appear (PC). If it doesn't, open "My Computer" and select the flash drive.

- Very important: **DO NOT FORMAT THE DRIVE** or the player software will be erased and the .MOV module will not work any longer.

- The main folder includes two sub folders: VIDEO and PHOTO.
- Move the video file (.mov, .avi, .mp4, .mpeg) into the VIDEO folder. If there is more than one video, they will play in alphabetical order.
- Move a batch of photos (.jpg) into the PHOTO folder, a slideshow will be created automatically.

- In order to correctly display videos and photo slideshows, please note that the 7" module requires a resolution of 1024x600, and the 10" module requires a resolution of 1280x800.

- When you move one or more mp3s into the PHOTO folder, they will be automatically matched with the slideshow.